

Серия RAF



Обозначение	Параметры инструмента			
	d	l_2	D	L
RAF 020306R	2	6	3	40
RAF 020308R	2	8	3	40
RAF 0250308R	2.5	8	3	40
RAF 030310R	3	10	3	40
RAF 030410R	3	10	4	40
RAF 030315R	3	15	3	40
RAF 030415R	3	15	4	40
RAF 030615R	3	15	6	40
RAF 040415R	4	15	4	40
RAF 040420R	4	20	4	47
RAF 040430R	4	30	4	64
RAF 040630R	4	30	6	64
RAF 040615R	4	30	6	64
RAF 050520R	5	20	5	64
RAF 050530R	5	30	5	75
RAF 050620R	5	20	6	75
RAF 060620R	6	20	6	64
RAF 060630R	6	30	6	75
RAF 060640R	6	40	6	80
RAF 080825R	8	25	8	75
RAF 080840R	8	40	8	80
RAF 101020R	10	20	10	64
RAF 101030R	10	30	10	75
RAF 121220R	12	20	12	64
RAF 121230R	12	30	12	75
RAF 141425R	14	25	14	75
RAF 141435R	14	35	14	80