


Обработка радиусной канавки - серия PR

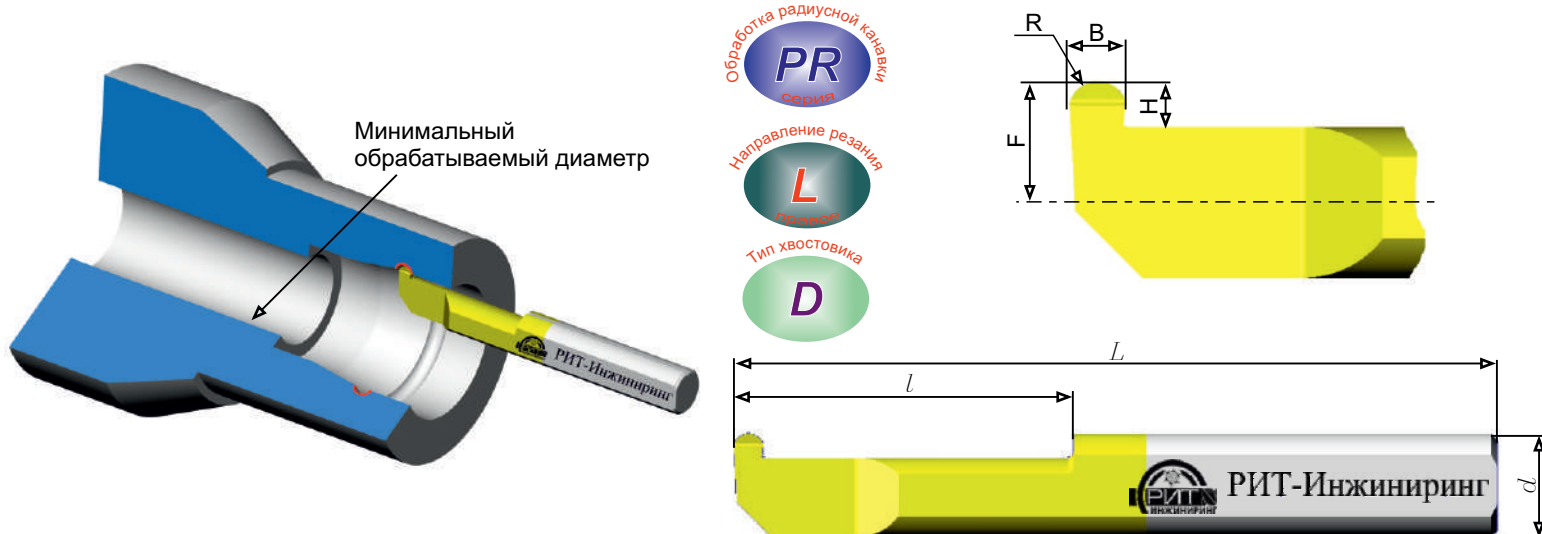

Минимально обрабатываемый диаметр	Обозначение	Параметры инструмента						
		dh6	L	l	B	R	H	F
4.1	CL-PR-4.1-10-4-4.7-R0.5-D	4.0	4.7	10	1.0	0.5	1.0	1.7
4.1	CL-PR-4.1-10-4-4.7-R0.75-D	4.0	4.7	10	1.5	0.75	1.0	1.7
5.1	CL-PR-5.1-15-5-4.7-R0.5-D	5.0	4.7	15	1.0	0.5	1.2	2.3
5.1	CL-PR-5.1-15-5-4.7-R0.75-D	5.0	4.7	15	1.5	0.75	1.2	2.3
5.1	CL-PR-5.1-15-5-4.7-R1.0-D	5.0	4.7	15	2.0	1.0	1.2	2.3
6.1	CL-PR-6.1-15-6-4.7-R0.5-D	6.0	4.7	15	1.0	0.5	1.6	2.8
6.1	CL-PR-6.1-15-6-4.7-R0.75-D	6.0	4.7	15	1.5	0.75	1.6	2.8
6.1	CL-PR-6.1-15-6-4.7-R1.0-D	6.0	4.7	15	2.0	1.0	1.4	2.8