


Обработка торцевой радиусной канавки - серия PTR

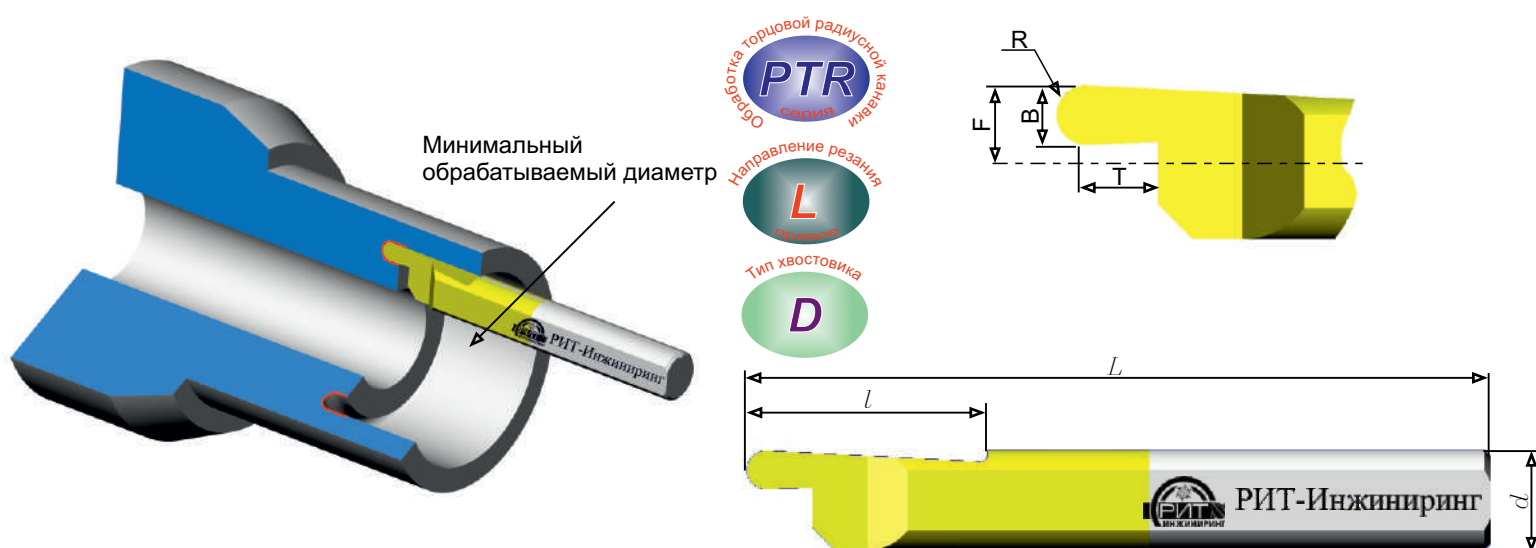

Минимально обрабатываемый диаметр	Обозначение	Параметры инструмента						
		dh6	L	l	R	B	T	F
5.0	CL-PTR-5.0-15-4-47-R0.5-D	4.0	47	15	0.5	1.0	1.2	1.9
5.0	CL-PTR-5.0-15-4-47-R0.75-D	4.0	47	15	0.75	1.5	1.5	1.9
6.0	CL-PTR-6.0-22-5-47-R0.5-D	5.0	47	22	0.5	1.0	1.2	2.4
6.0	CL-PTR-6.0-22-5-47-R0.75-D	5.0	47	22	0.75	1.5	1.5	2.4
6.0	CL-PTR-6.0-22-5-47-R1.0-D	5.0	47	22	1.0	2.0	2.5	2.4
8.0	CL-PTR-8.0-22-6-47-R0.5-D	6.0	47	22	0.5	1.0	1.2	2.9
8.0	CL-PTR-8.0-22-6-47-R0.75-D	6.0	47	22	0.5	1.5	1.5	2.9
8.0	CL-PTR-8.0-22-6-47-R1.0-D	6.0	47	22	1.0	2.0	2.5	2.9